



SOLPLANET RTU ASW 05-12kH-T2/T3 Series ASW 15-30kW TH Series CONNECTION TO CORE

1. Connect Monitor port pin 1 to RS485-1 port with A1 designation
2. Koppla in Monitor port pin 2 mot RS485-1 port med B1 beteckning

