



ECOFLOW TCP

EcoFlow PowerOcean 3-phase series 10-29kW

CONNECTION TO CORE

1. Update the inverter to the latest software version.
2. Connect PowerOcean to the same LAN as Core.
3. Enable Modbus by using the EcoFlow Pro app.
- Settings/ Control mode/ Modbus
4. Assign an available static IP address to the inverter.

